


INSTALLATION INSTRUCTIONS – SPACEGRID® II ON MAGNA-BAR™

Step 1

Identify existing bar in cooler
Lift up and pull out of the cooler

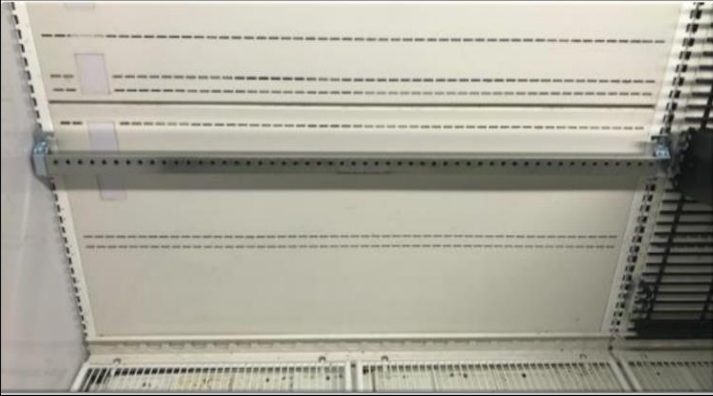

Step 2

Disassemble brackets with screwdriver and remove from bar. Discard old hardware.



Step 3

Assemble new hardware with screwdriver. Do not tighten fully. Assemble clamp strap and screw into the back plate on the back of the bracket. Complete for both left and right bracket.



Step 4

Place bracket on each end of bar.
Do not fully tighten.

Note: “FRONT and UP” stamping on bar should face the BACK of cooler




Step 5

Set bar in cooler hooks



Step 6

Tighten screws into place

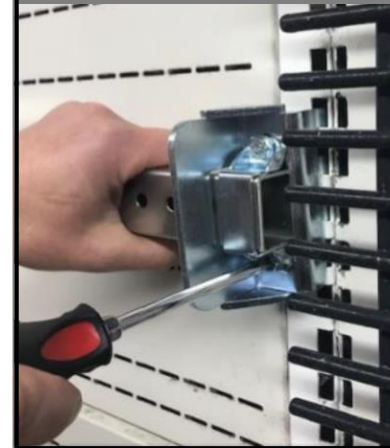

Step 7

Place SpaceGrid® II trays on bar. Limit gaps between trays.

